Wireless Presenter User's Manual

Model: DSIT037

Be sure to carefully read this user's manual before using the wireless presenter and keep it for future reference.

WARNING!

Pointer beam can cause permanent damage to eyes. Do not look into the beam or shine the beam into your eyes, other peoples' eyes, or pet's eyes.

Keep this device away from Children.

This is a working tool, not a toy. It should only be used by adults.

This device contains a built-in rechargeable lithium battery and cannot be placed in fire or exposed to water or other liquids. Overheat or short-circuit could make the battery explode.

Declaration

Information in this document is subject to change without notice. No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without prior permission of the seller.

The seller provides this document without warranty, or condition of any kind. The seller may make improvements or changes in the product described in this document at any time.

Charter 1 Introduction

I. Product description

It is a great tool for PowerPoint presentations! With it, you can interact with your audiences and still maintain control of your laptop or PC. You don't need to stand beside your computer or blackboard. With it you have complete control!

You can effortlessly deliver your best PowerPoint presentations with the Doosl wireless presenter, highlight important details with the pointer and manage the presentation within a 300 meters range.

II. Features

1. Enables user to realize page change by the four direction keys and Page Down/Up on the keyboard; Fully supports PowerPoint, Keynote and Prezi.

2. 433MHz RF frequency, which is an ISM free frequency and can be used world-wide; 300-meter wireless range with 360-degree control; Supports automatic frequency hop and effectively avoids the interference to other RF signal.

3. Equipped with a LCD display with timer, clock and silent vibrating alerts function, which helps you manage time.

4. Supports page up, page down, full screen and black screen, with the details as follows: Click the Page Up button to turn to the previous page; Click the Page Down button to turn to the next page; Click the full screen button for full screen or exit; Click the Black screen button for black screen or exit.

5. In addition to the pointer, page up, page down, play slides, blank screen that frequently used in PowerPoint presentation, it also supports hyperlinks with the details as follows: Click the Tab key for switch among hyperlinks; Click the Enter key to open an hyperlink; Press and hold the Tab key, or press the Tab key and the Alt key at the same time, for switch among the open windows; Press and hold the Enter key, or press the Alt key and the F4 key at the same time, to close the current window.

6. This presenter can automatically enter into standby mode when not in use. It has its individual power switch for user convenience.

7. It supports plug-and-play and easy carrying.
8. It comes with a rechargeable 1000mAh polymer lithium battery. If necessary, you can charge it with a mobile phone charger.
9. Compatible with USB 3.0 and supports plug-and-play.

III. Who should have this device

All the people who present with PowerPoint and a projector, such as teachers, trainers, businessmen, will need this device.

IV. System Requirements

This presenter works on all Windows operating systems (Windows 7 / 8 / 10 and later) and Mac OS / Linux / Android system. However, maybe only laser pointer and page turning is available when works on Android, Linux and Mac OS. In addition, your computer should have at least one USB port, which is compatible with USB 1.1/2.0/3.0.

V.Operation system

Windows 2003, XP, Windows Vista, Windows 7, Windows 8,Windows10, Mac OS, Linux, Android.

VI. Package contents

Wireless presenter (USB receiver included)*1

User Manual*1

USB Cable*1

VII. Specifications Transmitter

Technology:	Radio Frequency
Frequency:	433MHz
Control Distance:	>300m
Laser Class:	II
Max Output:	<1mW
Laser Distance:	>200m
Wavelength:	532nm
Battery:	1000mAh
Working Voltage:	3.6V~4.2V
Sleep Current:	<150uA
Dimension:	182*47*15.5mm
Weight:	76g

USB Receiver

Operation System:	Windows 7/8/10, Mac OS, Linux, Android
USB Version:	USB 1.1/2.0/3.0
Working Voltage:	4.5V-5.5V DC
Dimension:	226*33.8*9.8mm(include antenna)
Weight:	32g

Charter 2 Getting Started

I. Function map

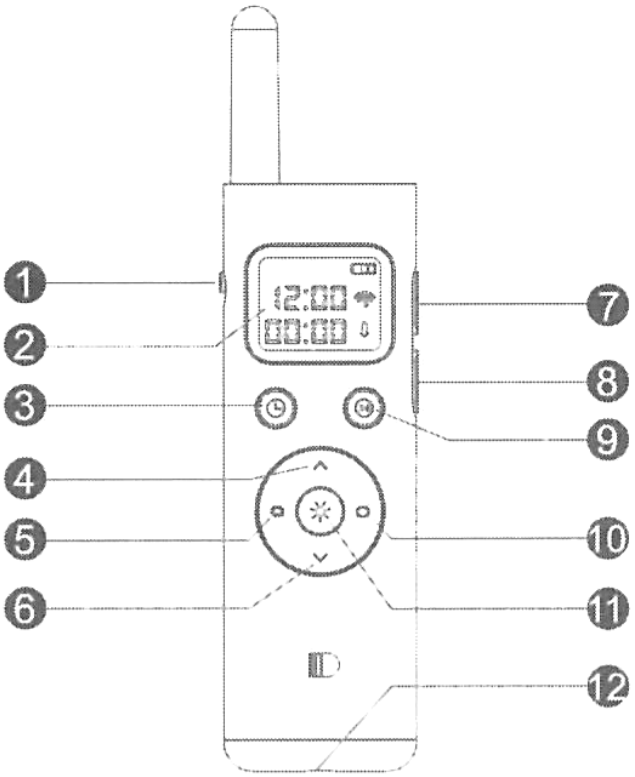

1. ON/OFF Button
2. LCD Display
3. Clock Setting Button
   Count Down Setting Button
4. Page Up
5. Black Screen /Exit
6. Page Down
7. Tab Key
8. Enter Key

9. Short Press: Pause or Start Countdown
   Long Press: Clear or Reset Countdown
10. Full Screen/Exit
11. Pointer Button
12. Micro USB Charging Port

Tab key, press and hold alt-tab
Enter key, press and hold alt-F4
Long press the "Up" and "Down" at the same time to switch Prezi Mode.

1. Clock
2. Timer
3. Battery Level Icon
4. Launch Icon

II. Function Description

1. Pointer: Press the Pointer key to emit the beam and highlight the focus.
2. Start the Microsoft PowerPoint and open a PowerPoint file.
3. In full screen mode, you can click the black screen button to enter black screen mode, also click it to exit black screen mode.
4. Hyperlinks: Click the Tab key for switch among hyperlinks; Click the Enter key to open an hyperlink; Press and hold the Tab key, or press the Tab key and the Alt key at the same time, for switch among the open windows; Press and hold the Enter key, or press the Alt key and the F4 key at the same time, to close the current window.
5. Page Up/Down: Click the PageUp or PageDown key to go to the previous page or the next page.
6. Countdown Setting

   - Short press button to light backlight, short press again to begin countdown setting (the default is minute setting, minute in number starts to flicker),then short click button to switch hour and minute setting.
   - Set countdown via pressing Page

Up/Down button. Short pressing Page Up button once decreases 1 minute/1 hour, long pressing Page Up button will decrease rapidly; short pressing Page Down button once increases 1 minute/1 hour, long pressing Page Down button will increase rapidly.

- After setting, short press Pointer button to confirm and start to count down.

-The presenter will silently vibrate with a 2- and 0-minute warning that tells you it's time to wrap up.

- During countdown, short press ⏯ button to pause or start, long press ⏯ button to clear or reset.

7. Clock Setting

- Long press the 🕒 button to set time,light backlight simultaneously, (the default is minute setting, minute in number starts to flicker), then click the 🕒 button to switch and adjust hour and minute setting.

- Set clock via pressing Page Up /Down button. Short pressing Page Up button once decreases 1 minute/1 hour, long pressing Page Up button will decrease rapidly; short pressing Page Down button once increases 1 minute/1 hour, long

pressing Page Down button will increase rapidly.

- After setting, short press Pointer button to confirm and start to set clock.

Note:

1. In the case of countdown setting, if you would like to reset countdown, you need long press ⏭ button to clear, and then reset countdown.
2. After the countdown is completed, the default is to start timing. In the case of timing, if you would like to reset countdownyou need long press ⏭ button to clear, and then reset countdown.tt

III. Installation

Push the power switch to on position; The presenter will vibrate while turn it on, the back light of LED will lighten , the default shows clock and battery level on the LCD display when start up.

Plug the receiver into the USB port

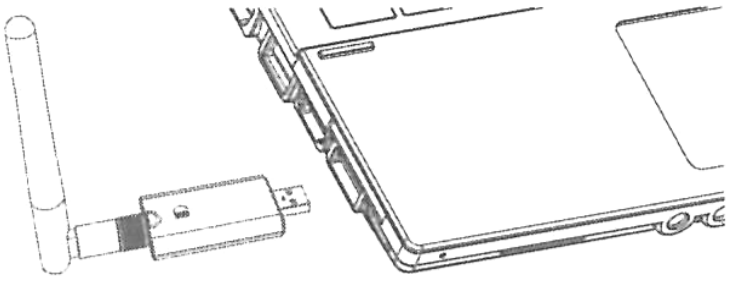

1. Operate the USB receiver

Please plug the receiver into the laptop's USB port. The system will automatically detect the device. Follow the steps to search the driver of the USB device and complete the setup.

2. Operate the wireless presenter

3. Turn off the wireless presenter

IV.Recharging the wireless presenter

Connect the wireless presenter to a USB port of lap top or a USB port of mobile phone charger via USB cable, The battery symbol in the top right corner will roll over and over again when charge (the same when power on or power off).

After fully charged, the electric quantity will display 3 grids and the battery symbol will flicker to remind you.

The battery symbol with no battery quantity display will flicker after power on when the battery is running low.

Normally the recharging time is about two and half hours.

V.How to code

This presenter has been coded successfully when leave the factory. In normal situation, user does not need to code it. In addition to the situations as follow:

the pointer works normally and receiver can also be identified by computer, but the transmitter does not work and cannot control your PC.

In this case, it is possible that the receiver does not correctly save the address code and cannot receive the signal from the transmitter.

Therefore, user must code the presenter again.

In order to code, please operate as follows:

Open a PowerPoint file on your computer.

Press and hold the Page Down key and turn on the power switch, When you see the powerPoint on the computer screen turn pages rapidly, now coding is successful.